

## Installing the Magnetic Water Softener onto the Undersink UltraStream Inlet Hose

1. Turn the tap off at the water supply as shown in figure 1.
2. Turn the tap off under the UltraStream as shown in figure 2.
3. Use your finger nail to hold down the collar and slowly ease out the yellow tube as shown in figures 3 and 4. You can use a butter knife instead of your nail.
4. Feed the tube through the Magnetic Water Softener as shown in figure 5 and 6.
5. Feed the tube back through the side of the UltraStream base and back into the tap as shown in figures 7 and 8.
6. Ensure the tube is firmly back in place as shown in figure 8.
7. Turn the taps back on as shown in figures 9 and 10. Then, check for leaks.



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5



Figure 6

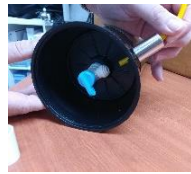


Figure 7



Figure 8

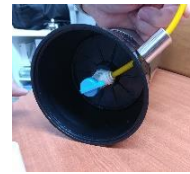


Figure 9



Figure 10

## Installing Magnetic Water Softener on Benchtop UltraStream Hose and Diverter Assembly

1. Unscrew the knurled nut connecting the tube to the diverter as shown in figure 1 and 2.
2. Pull tube away from the diverter as shown in figure 3.
3. Use a sharp knife to cut off the flared end of the tube, as shown in figure 4.
4. Ensure the end of the tube is clean and free of any burrs as shown in figure 5.
5. Remove knurled nut from the tube, if not already done so, refer to figure 6.
6. Feed tube through the Magnetic Water Softener as shown in figure 7 and 8.
7. Replace knurled nut onto the tube as shown in figure 9.
8. Push tube back onto the diverter as shown in figure 10 and 11.
9. Tighten knurled nut into place as shown in figure 12.
10. Finished assembly figure 13.



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

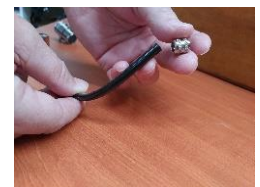


Figure 6



Figure 7



Figure 8



Figure 9



Figure 10



Figure 11



Figure 12



Figure 13